

# ROLLER JACQUARD

MOTORIZED SYSTEM  
ALSO AVAILABLE


PRINTED ROLLER  
SHANGRILLA BLINDS

ROLLER BLINDS  
WOODEN BLINDS


ZEBRA BLINDS  
VERMAN BLINDS

# HOW TO MEASURE FOR WINDOW BLINDS

## OUTSIDE MOUNT WINDOW

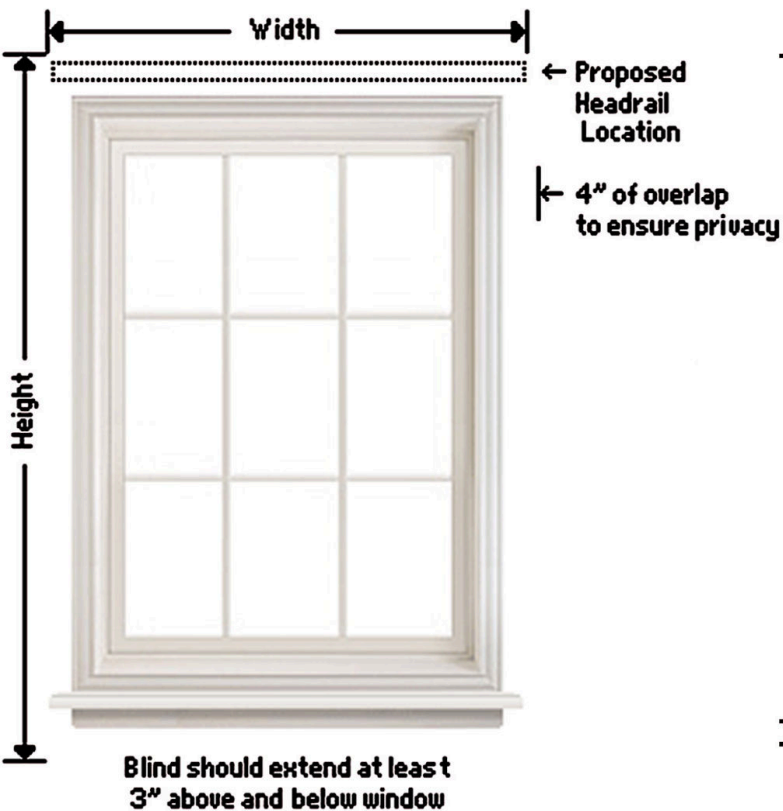

## PATIO DOOR

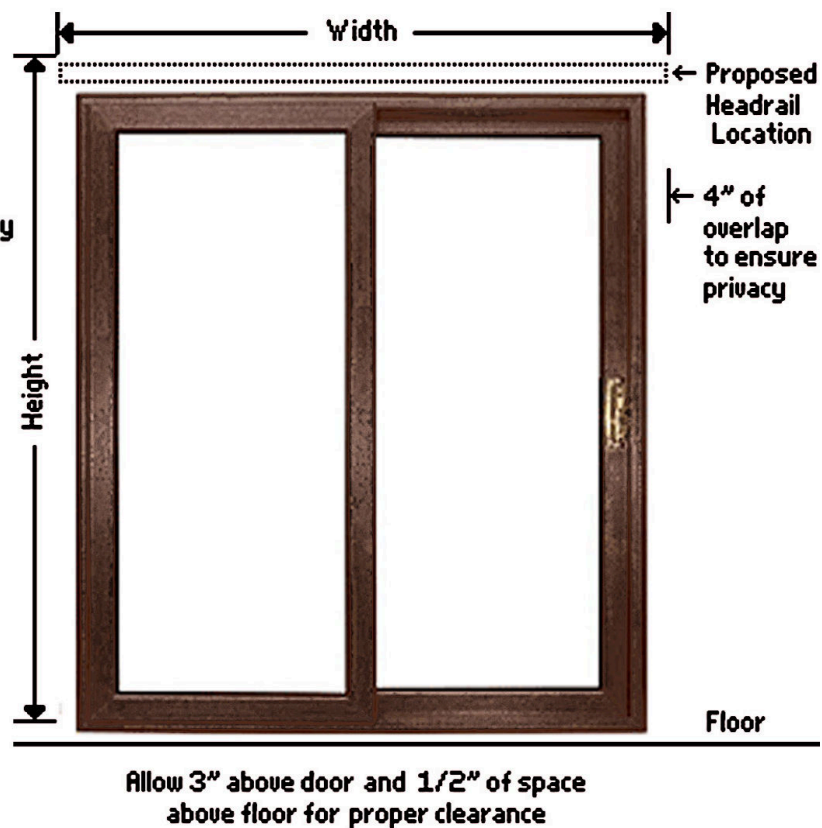

When measuring your home for custom window blinds, there are a few tips to keep in mind to ensure that you receive the window blind made to your specifications. These steps will help you measure all types of window blinds precisely.

## MEASURING FOR WINDOW BLINDS:

1: Measure the width of the window opening (including trim black). If there is a room, add at least 4 inches to each side for overlap to ensure you don't have gaps in your installed custom window Blinds that can let in light.


2: Measure the height of the window opening. Add at least three inches in height to allow for mounting brackets above the door frame or window frame and add your desired overlap at the bottom. If your window blinds will hang down to the floor or to the windows deduct at least one and a half inch for clearance.

3: Window blind measurements are determined by width first and then length. For example, 6 inch x 48 inch window blinds are 66 inches wide (from side to side) and 48 inches long (from top to bottom).

**ROLLER JACQUARD**  
**COLOR NO#: 3001**  
**WIDTH: 118 INCHES**



**ROLLER JACQUARD**  
**COLOR NO#: 3002**  
**WIDTH: 118 INCHES**

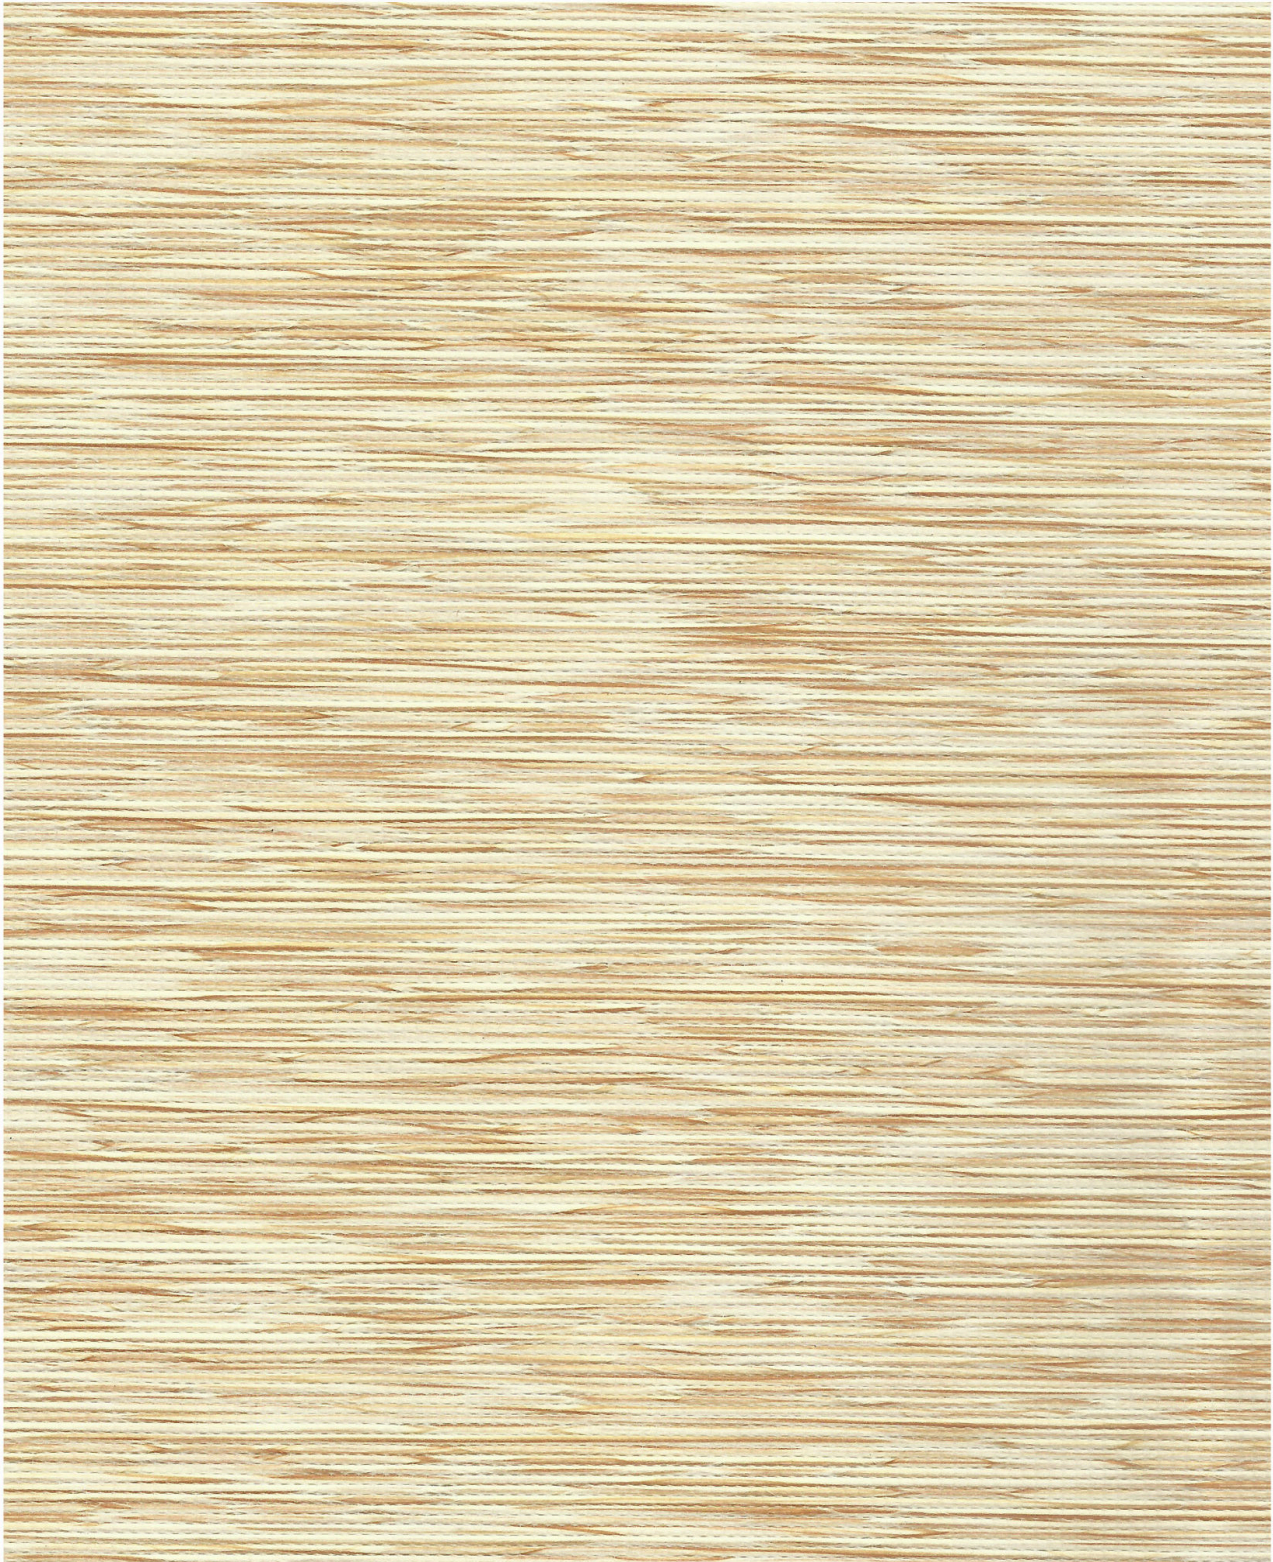

**ROLLER JACQUARD**  
**COLOR NO#: 3003**  
**WIDTH: 118 INCHES**



**ROLLER JACQUARD**  
**COLOR NO#: 3004**  
**WIDTH: 118 INCHES**



**ROLLER JACQUARD**  
**COLOR NO#: 3005**  
**WIDTH: 118 INCHES**



**ROLLER JACQUARD**  
**COLOR NO#: 3006**  
**WIDTH: 118 INCHES**






**ROLLER JACQUARD**  
**COLOR NO#: 3007**  
**WIDTH: 118 INCHES**



**ROLLER JACQUARD**  
**COLOR NO#: 3008**  
**WIDTH: 118 INCHES**

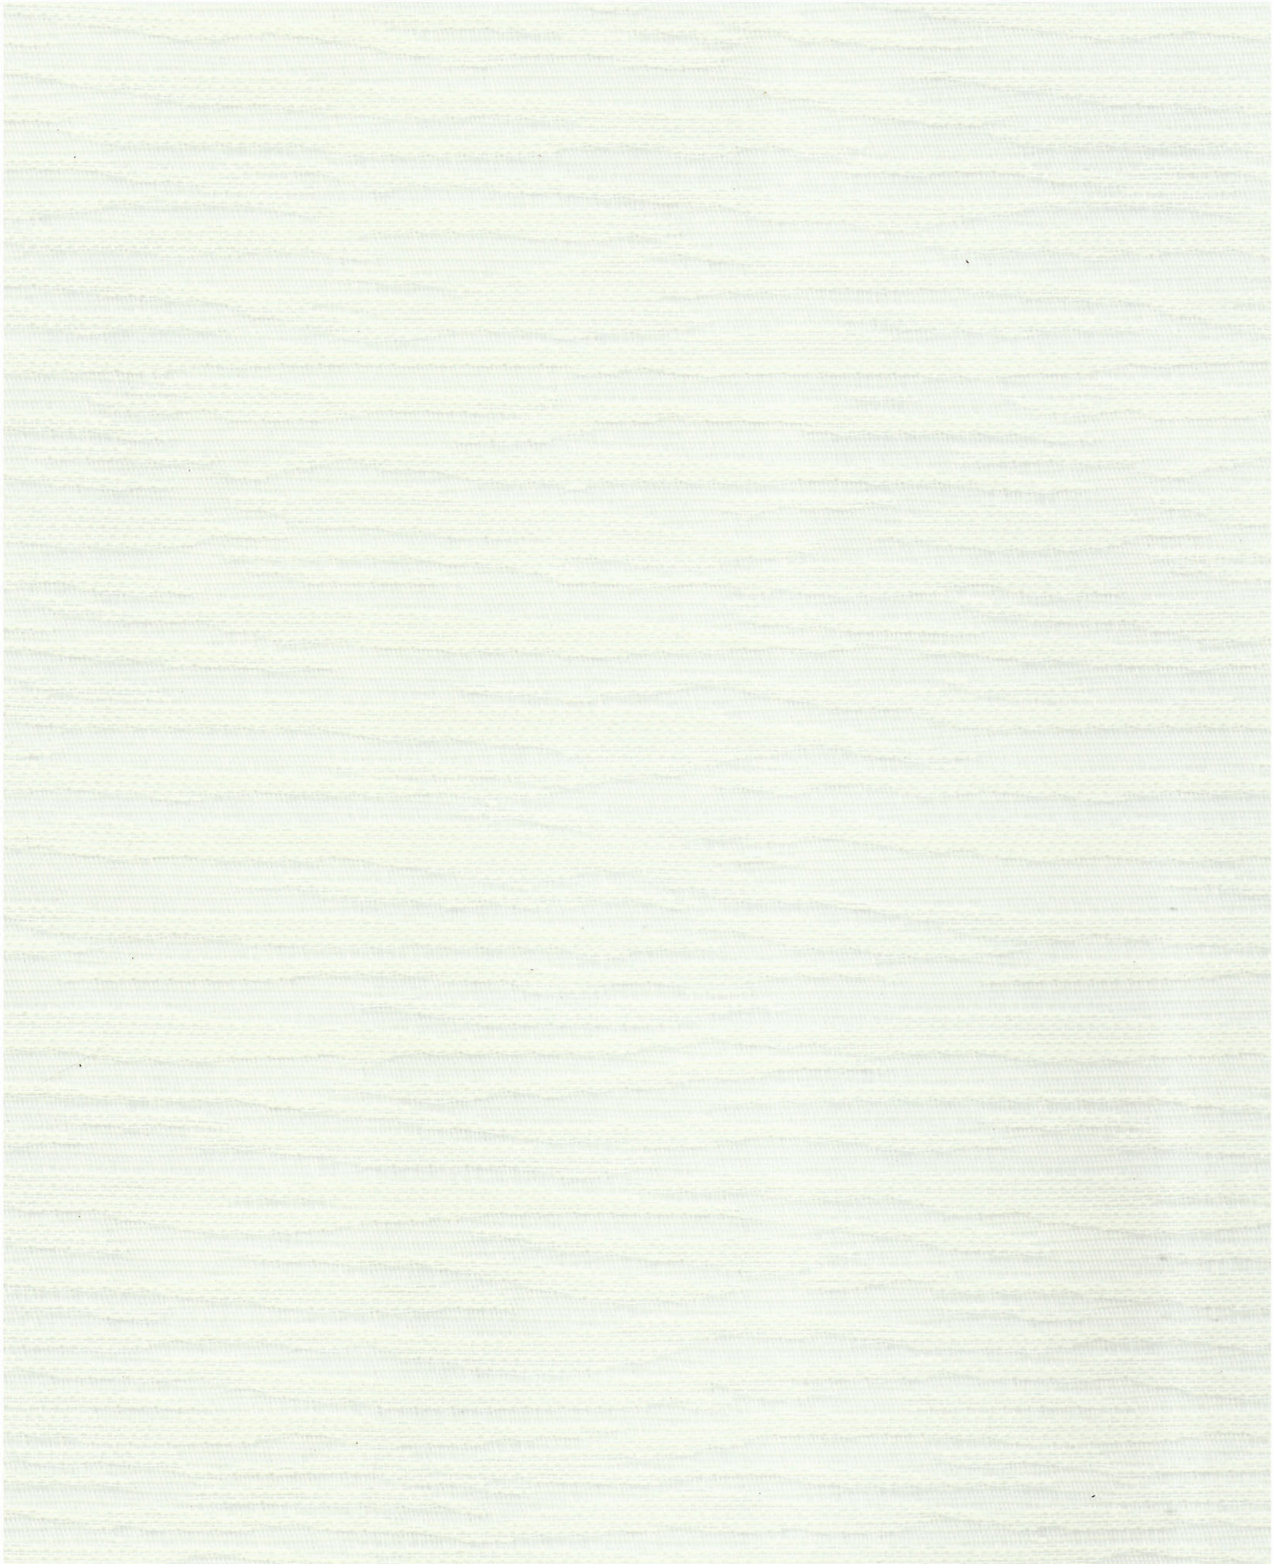

**ROLLER JACQUARD**  
**COLOR NO#: 3009**  
**WIDTH: 118 INCHES**



**ROLLER JACQUARD**  
**COLOR NO#: 3010**  
**WIDTH: 118 INCHES**

