


ROLLER PLEATED

MOTORIZED SYSTEM
ALSO AVAILABLE

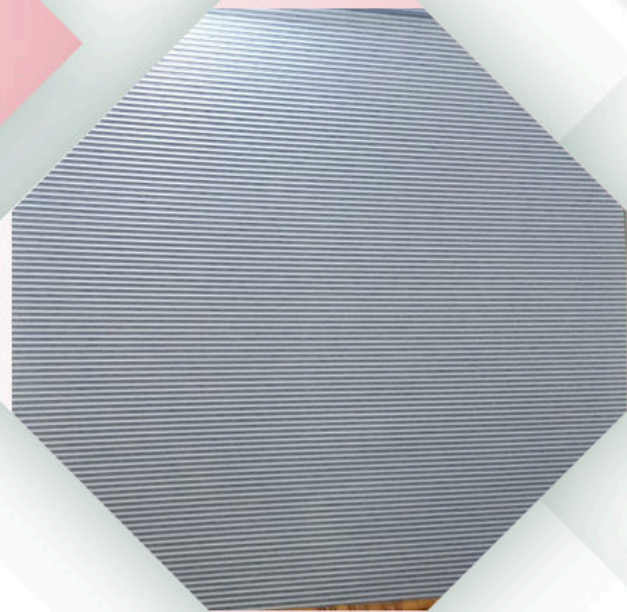

PRINTED ROLLER

ROLLER BLINDS

ZEBRA BLINDS


SHANGRILLA BLINDS

WOODEN BLINDS


VERMAN BLINDS

HOW TO MEASURE FOR WINDOW BLINDS

OUTSIDE MOUNT WINDOW

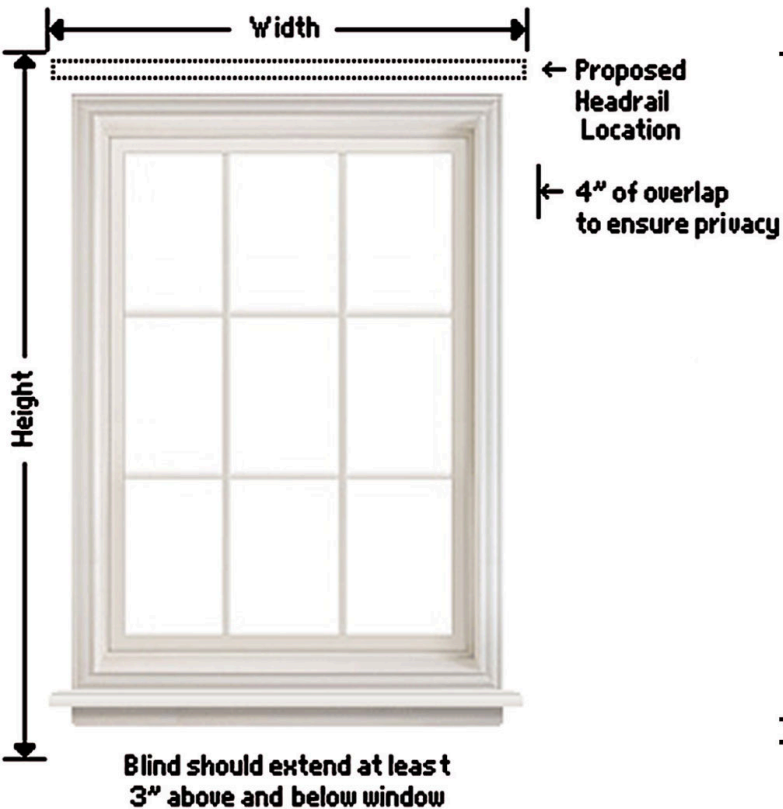

PATIO DOOR

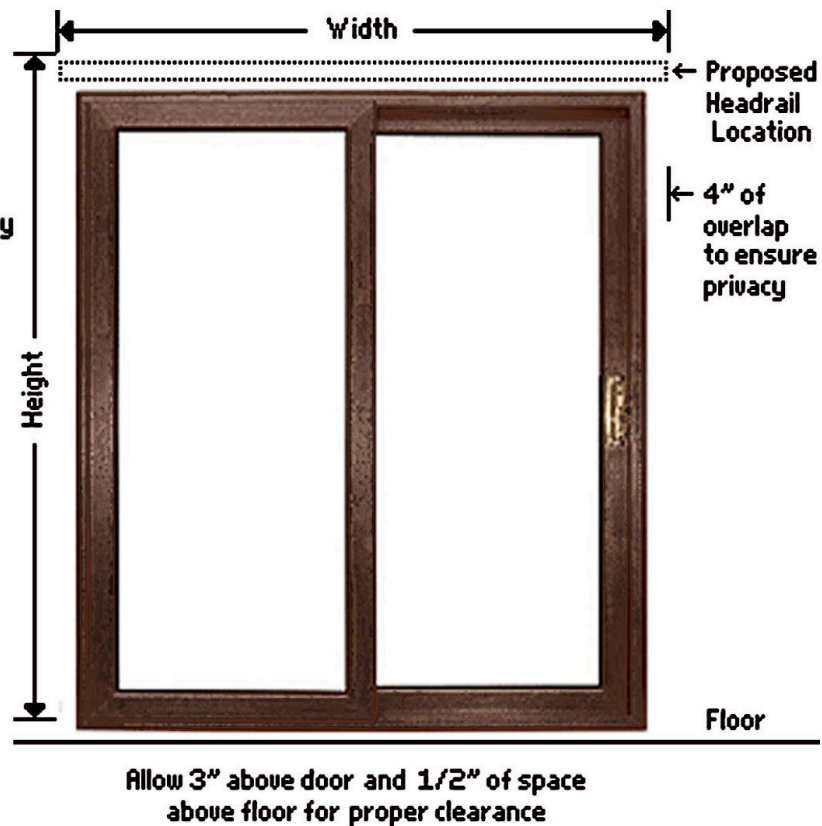

When measuring your home for custom window blinds, there are a few tips to keep in mind to ensure that you receive the window blind made to your specifications. These steps will help you measure all types of window blinds precisely.

MEASURING FOR WINDOW BLINDS:

1: Measure the width of the window opening (including trim black). If there is a room, add at least 4 inches to each side for overlap to ensure you don't have gaps in your installed custom window Blinds that can let in light.

2: Measure the height of the window opening. Add at least three inches in height to allow for mounting brackets above the door frame or window frame and add your desired overlap at the bottom. If your window blinds will hang down to the floor or to the windows deduct at least one and a half inch for clearance.

3: Window blind measurements are determined by width first and then length. For example, 6 inch x 48 inch window blinds are 66 inches wide (from side to side) and 48 inches long (from top to bottom).

ROLLER PLEATED
COLOR NO#: 1301
WIDTH: 118 INCHES




ROLLER PLEATED
COLOR NO#: 1302
WIDTH: 118 INCHES



ROLLER PLEATED

COLOR NO#: 1303


WIDTH: 118 INCHES

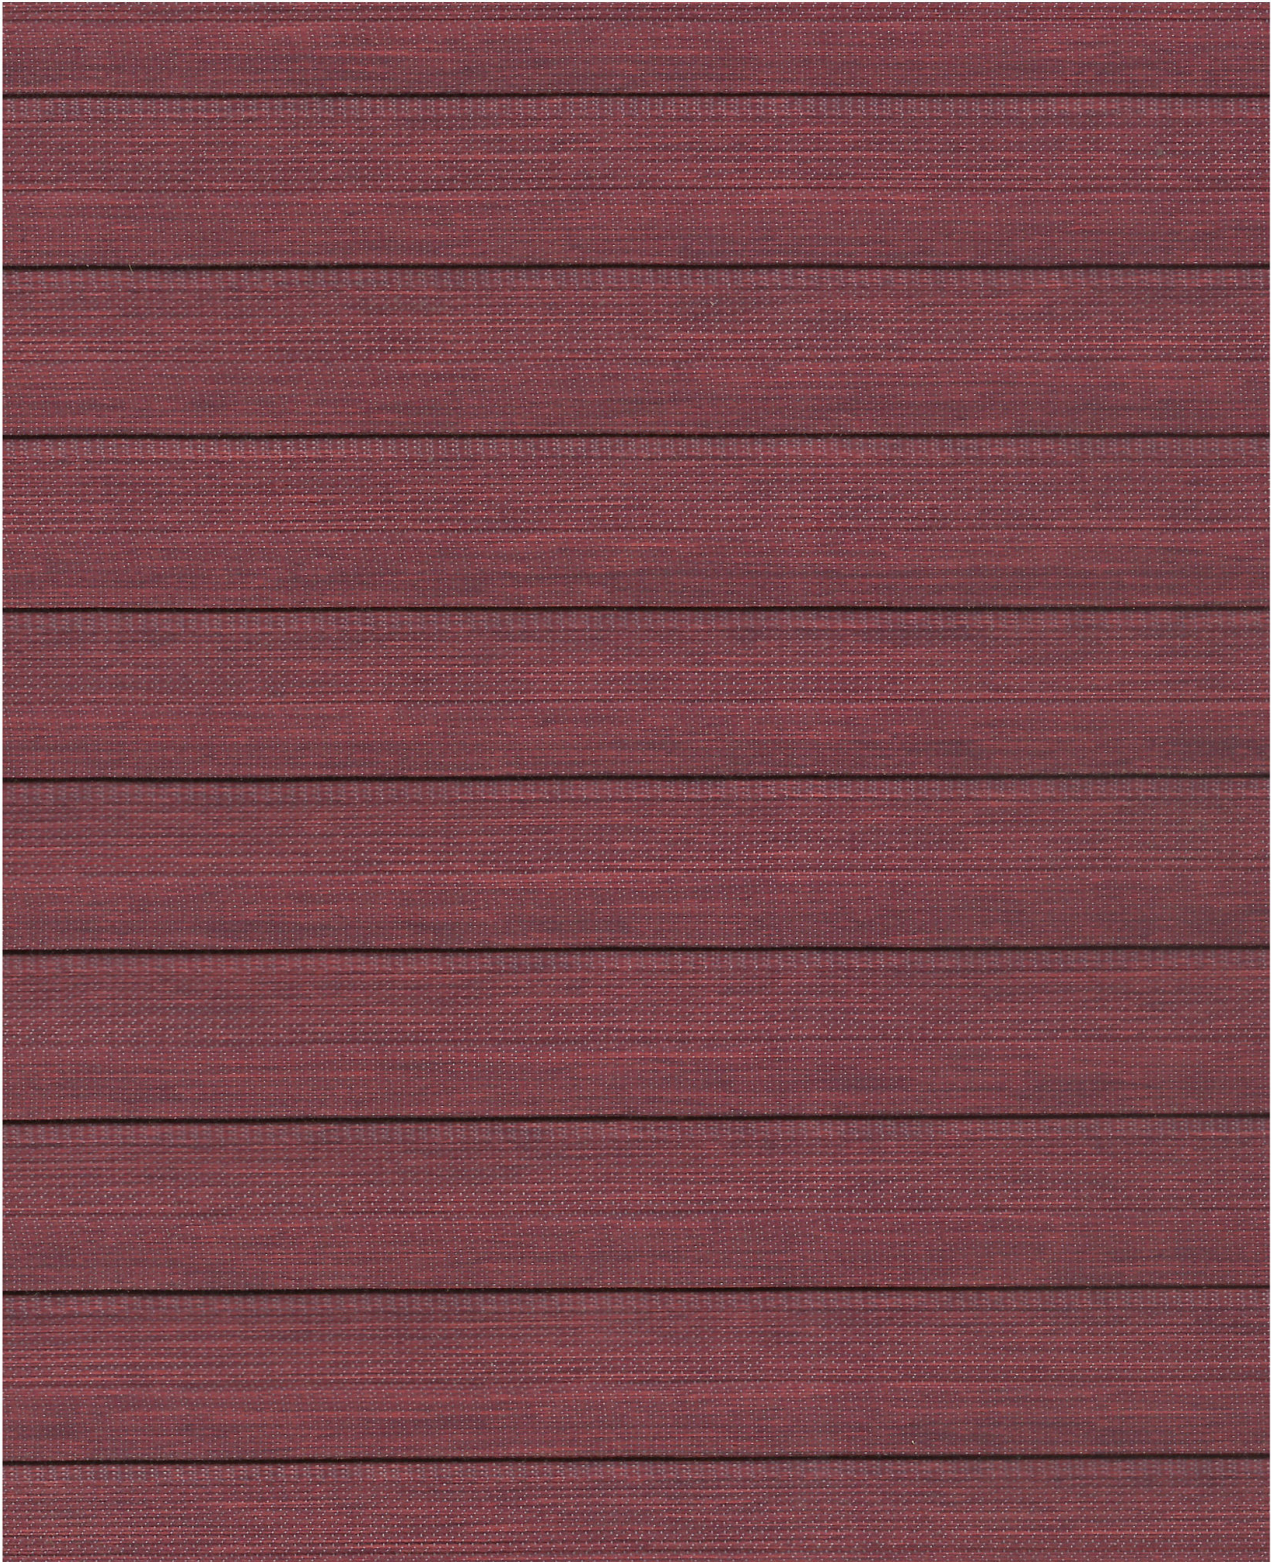


ROLLER PLEATED

COLOR NO#: 1304


WIDTH: 118 INCHES

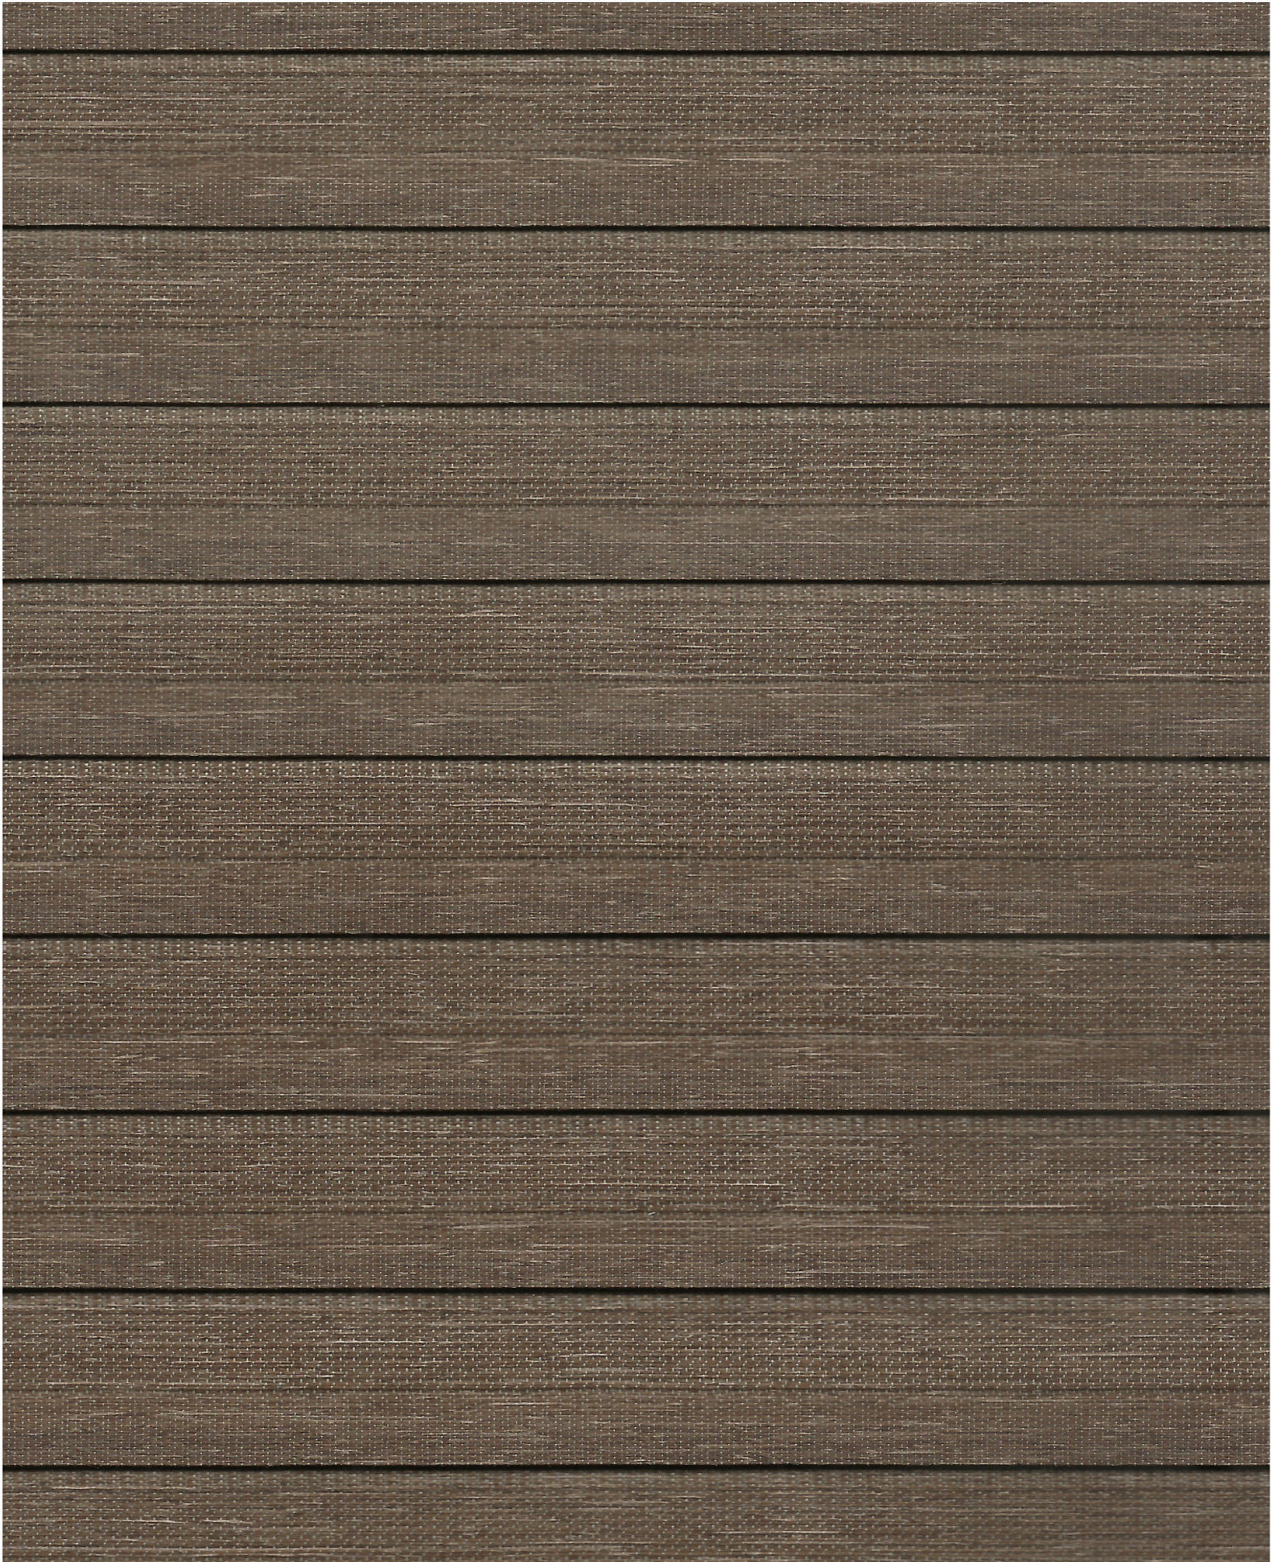

ROLLER PLEATED
COLOR NO#: 1305
WIDTH: 118 INCHES

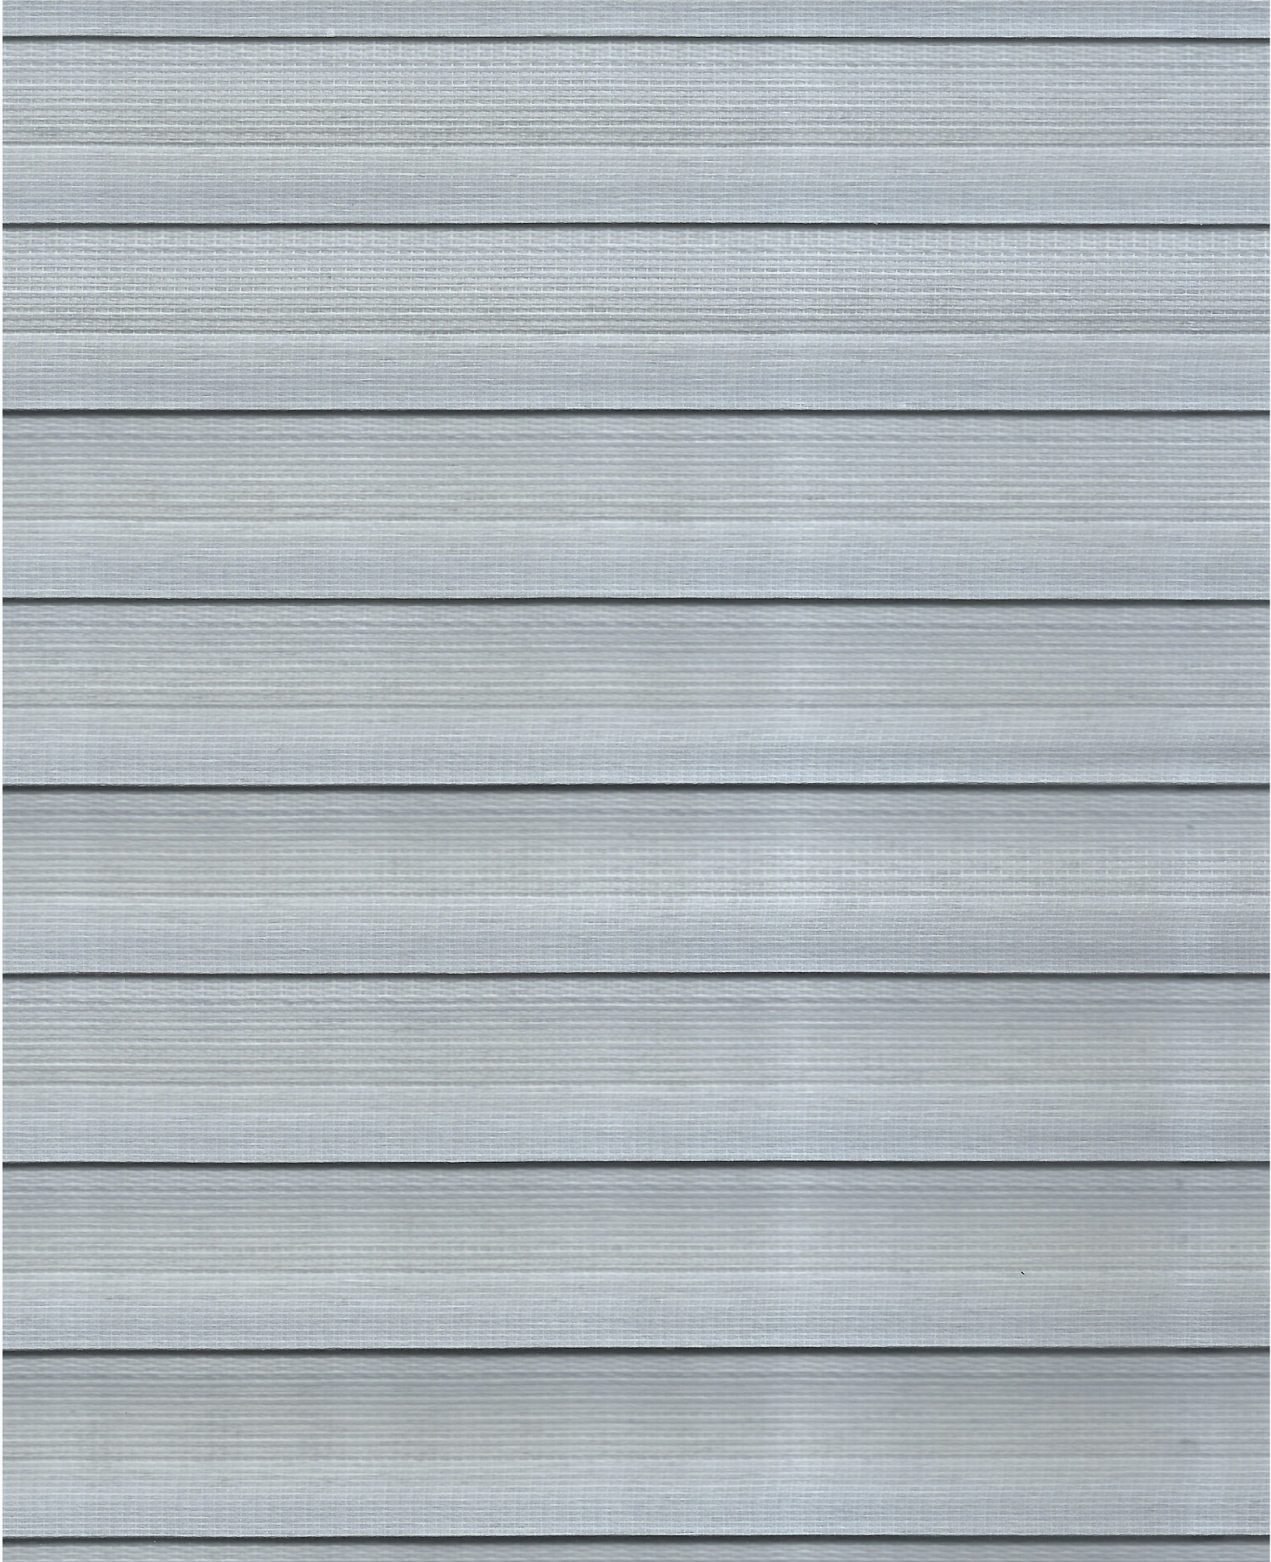

ROLLER PLEATED
COLOR NO#: 1306
WIDTH: 118 INCHES

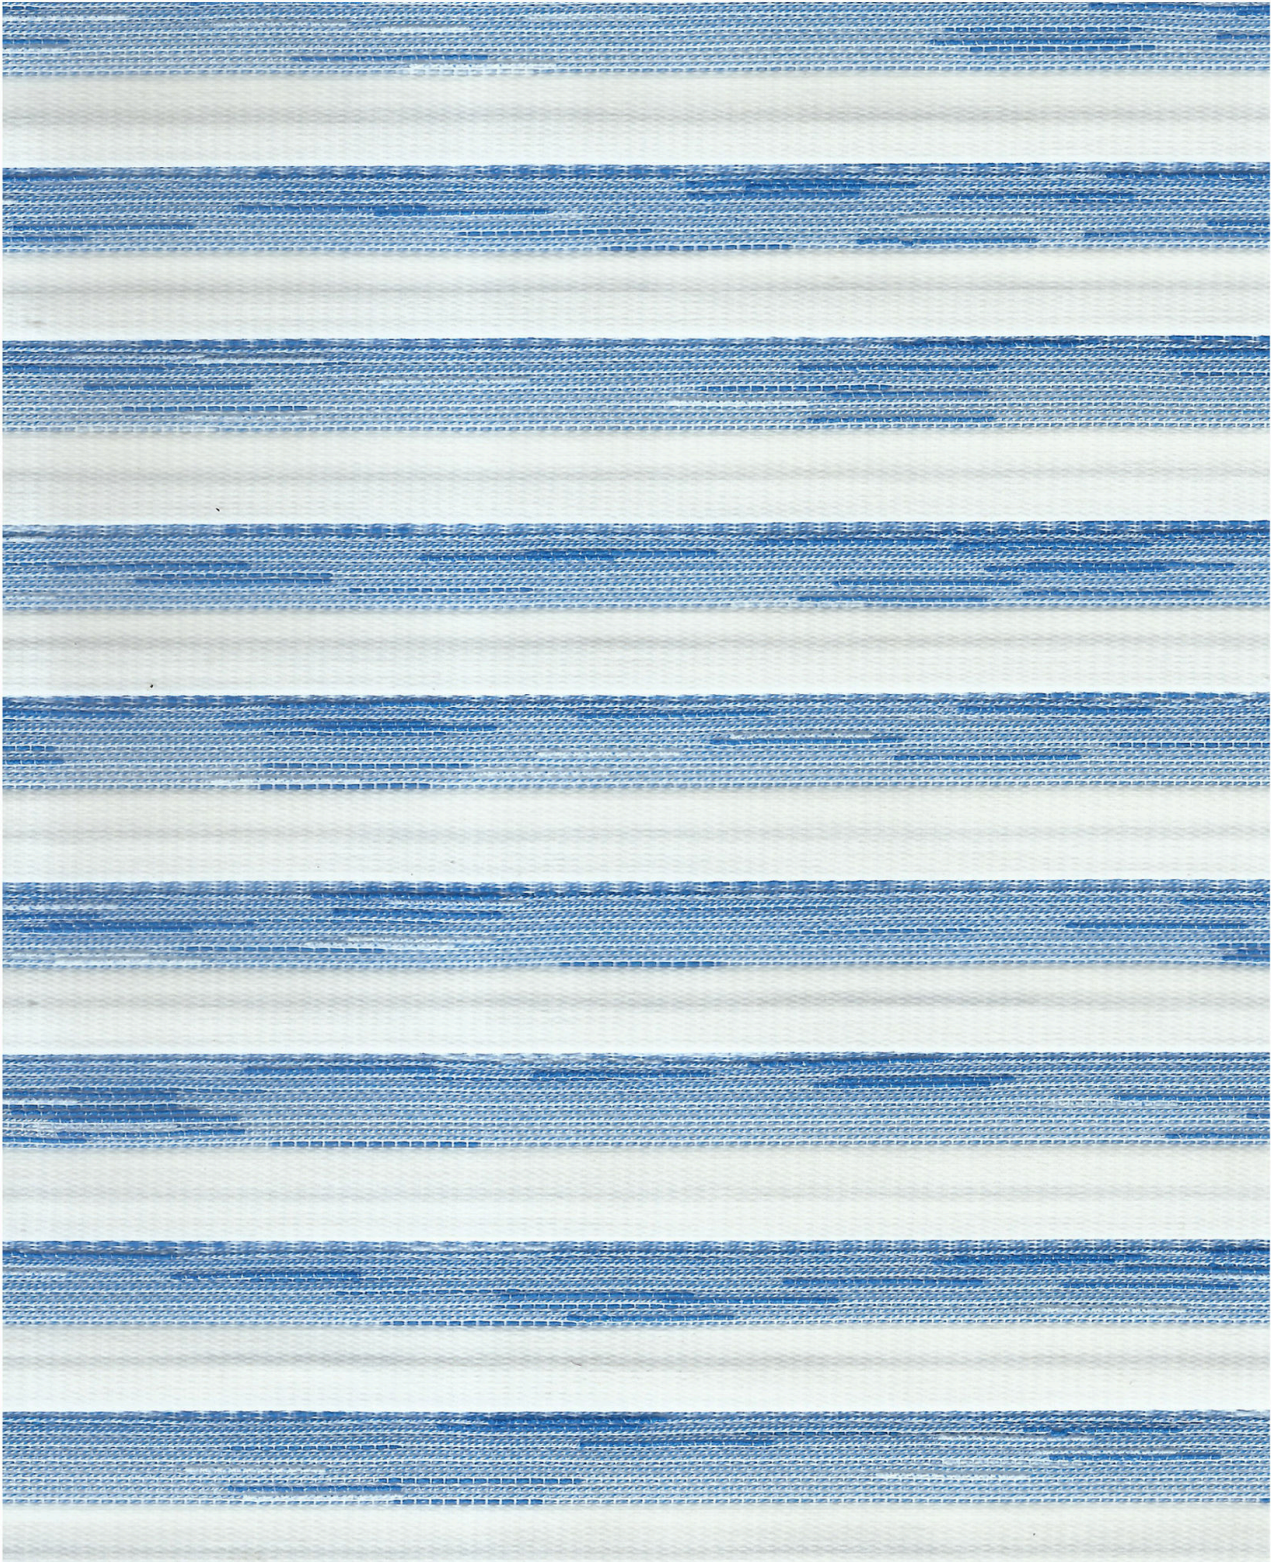

ROLLER PLEATED
COLOR NO#: 1307
WIDTH: 118 INCHES



ROLLER PLEATED
COLOR NO#: 1308
WIDTH: 118 INCHES



ROLLER PLEATED
COLOR NO#: 1309
WIDTH: 118 INCHES



ROLLER PLEATED
COLOR NO#: 1310
WIDTH: 118 INCHES

